




English

Installation and Operation Instructions

HeatBloC MC45 - DN 25

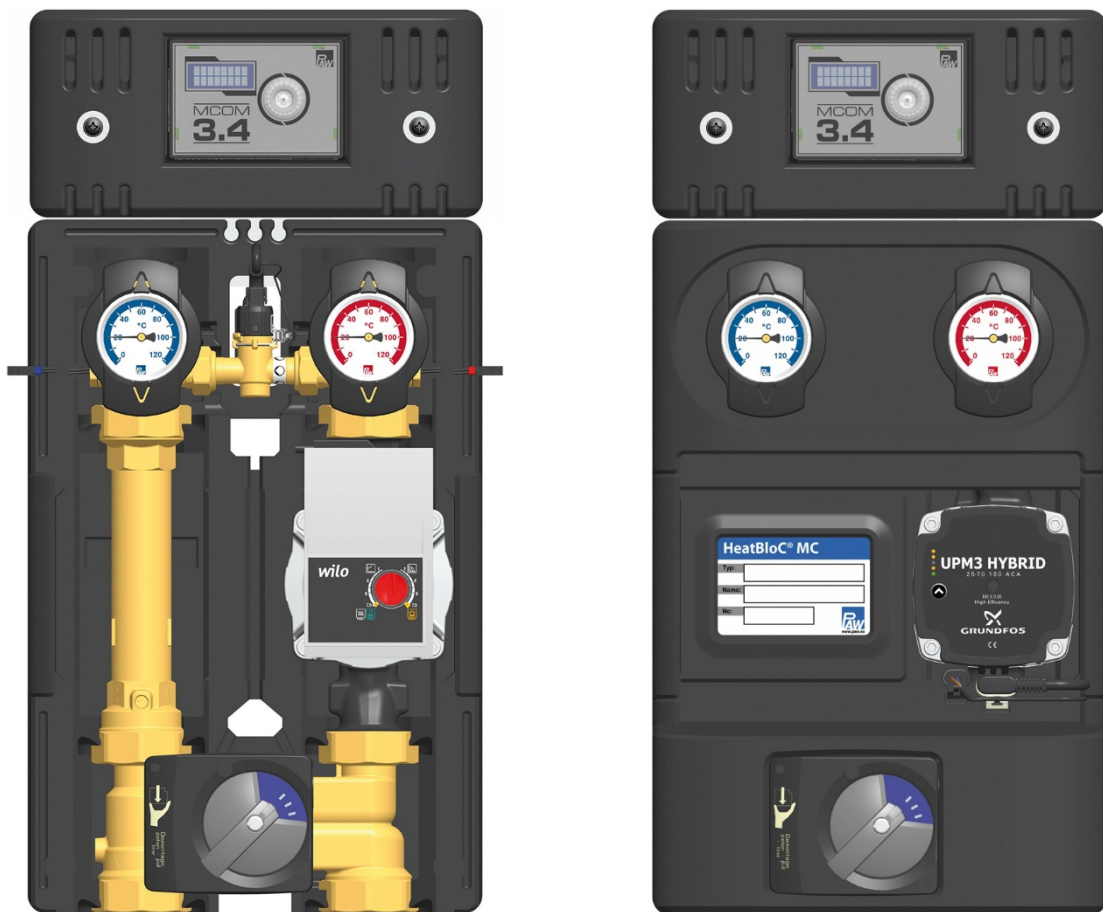

Item no. 994536093x-mub-en – Version V01 – Issued 2017/02

Translation of the original instructions

We reserve the right to make technical changes without notice!

Printed in Germany – Copyright by PAW GmbH & Co. KG

PAW GmbH & Co. KG

Böcklerstr. 11

D-31789 Hameln, Germany

Contents

1	General Information.....	4
1.1	Scope of these instructions	4
1.2	Designated use	4
2	Safety instructions	5
3	Product description.....	6
3.1	Equipment.....	6
3.2	Function	7
3.4	3-temperature mixing valve [specialist].....	8
3.5	Pump [specialist]	9
3.5.1	Pump settings	9
3.5.2	Pump settings Grundfos UPM3 Hybrid	9
3.5.3	Pump settings Wilo-Yonos PARA RSTG	10
3.6	Check valve	10
3.7	Actuator.....	11
4	Change of the flow line [specialist]	12
4.1	Conversion of the mixing valve.....	13
5	Assembly and installation [specialist].....	15
5.1	Installation and commissioning of the HeatBloC	15
5.2	Cabling.....	18
5.3	Accessories.....	21
5.3.1	Connection set (not included in the scope of delivery).....	21
5.3.2	Communication set (not included in the scope of delivery)	21
5.3.3	Cutting-ring compression fitting (not included in the scope of delivery).....	21
5.3.4	Wall bracket set for wall assembly (not included in the scope of delivery)	22
5.3.5	Pipe sets for MC45 (not included in the scope of delivery)	22
6	Scope of delivery [specialist]	23
6.1	Insulation and controller	23
6.2	Hydraulics	24
7	Technical data.....	25
7.1	Dimensional drawing DN 25	26
7.2	Pressure drop and pump characteristic curves.....	26

1 General Information



Carefully read these instructions before installation and commissioning.
Save these instructions in the vicinity of the installation for future reference.

1.1 Scope of these instructions

These instructions describe the installation, commissioning, function and the operation of the mixed HeatBloC MC45 DN 25. For other components of the installation, such as the pump, the controller or the modular distribution manifold, please observe the instructions of the corresponding manufacturer. The chapters called [specialist] are intended for specialists only.

1.2 Designated use

The HeatBloC may only be used in heating circuits taking into consideration the technical limit values indicated in these instructions.

The HeatBloC must **not** be used in drinking water applications.

Improper usage of the HeatBloC excludes any liability claims.

Only use PAW accessories with the HeatBloC.

This product complies with the relevant directives and is therefore labelled with the CE mark.
The Declaration of Conformity is available upon request. Please contact the manufacturer.

The wrapping materials are made of recyclable materials and can be disposed of with recyclable materials.

2 Safety instructions

The installation and commissioning as well as the connection of electrical components require technical knowledge commensurate with a recognised vocational qualification as a fitter for plumbing, heating and air conditioning technology, or a profession requiring a comparable level of knowledge [specialist].

The following must be observed during installation and commissioning:

- relevant local and national regulations
- accident prevention regulations of the professional association
- instructions and safety instructions of this manual

	 CAUTION Personal injury and damage to property! The HeatBloC must only be used in heating circuits filled with heating water according to VDI 2035 / Ö-Norm H 5195-1. The HeatBloC must not be used in drinking water applications.
--	---

NOTICE

Material damage due to mineral oils!

Mineral oil products cause lasting damage to seals made of EPDM, whereby the sealant properties get lost. We do not assume liability nor provide warranty for damage to property resulting from sealants damaged in this way.

- It is imperative to avoid that EPDM gets in contact with substances containing mineral oils.
- Use a lubricant based on silicone or polyalkylene and free from mineral oils, such as Unisilikon L250L and Syntheso Glep 1 of the Klüber company or a silicone spray.

3 Product description


The HeatBloC MC is a preassembled group of fittings for heating circuits. The integrated pump can be isolated by means of ball valves and can thus be maintained without draining of the system.

The nominal value for the differential pressure between the flow and the return is adjusted at the controller. On this basis, the controller regulates the pump. Thus, the hydraulic balancing at the distribution manifold is assured and an energy-saving operation of the pump is guaranteed at any time.

The PAW HeatBloC must be either installed on a PAW modular distribution manifold or a PAW wall bracket.


For the function of a MC system, **one** connection set (wall power supply, item no. 1398700) is necessary. The connection set is not included in the scope of delivery.

3.1 Equipment

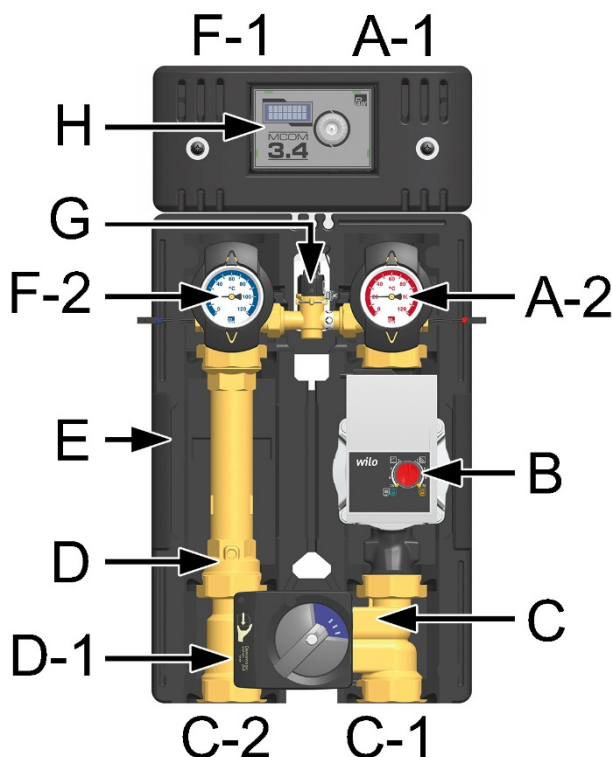

- A-1 Flow to the consumer circuit
- A-2 Flow ball valve with temperature sensor T_V and thermometer
- B Heating pump
- C 3-temperature mixing valve (4-way mixing valve)
- C-1 Flow from the heat generator
- C-2 Return to the heat generator
- D-1 Non-return valve, can be opened
- D Return pipe with check valve (can be opened)
- E Design insulation according to EnEV directive
- F-1 Return from the consumer circuit
- F-2 Return ball valve with temperature sensor T_R and thermometer
- G Differential pressure sensor
- H Controller MCom

3.2 Function

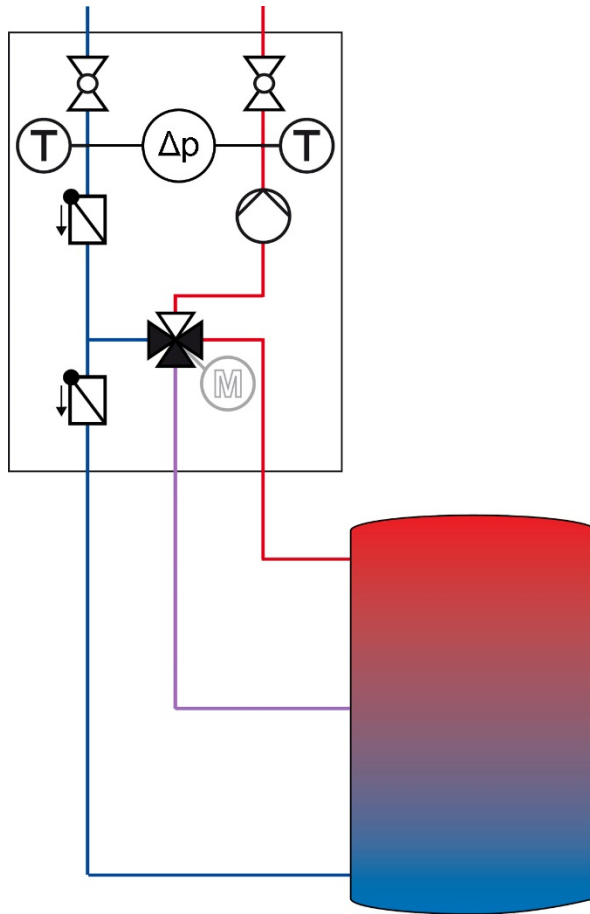

MC45 - 3-temperature mixing valve with additional connection for a second flow temperature


The 3-temperature mixing valve is used in combination with a buffer tank, which can be heated by either a solar thermal installation, a solid fuel boiler or a conventional boiler. The mixing valve is adjusted by means of an external controller.

If the consumer only needs a low temperature level, such as radiant panel heating systems, the 3-T mixing valve first takes the flow water from the intermediate part of the storage tank. When the temperature in this part is no longer sufficient, the hot water from the upper part of the tank is used.

By using two parts of the storage tank for two different flow temperatures, the energy from the buffer tank can be used more efficiently.

The return temperatures are low and the stratification in the tank is maintained.

It is also possible to connect the return of a high-temperature heating circuit as the flow of a low-temperature heating circuit.

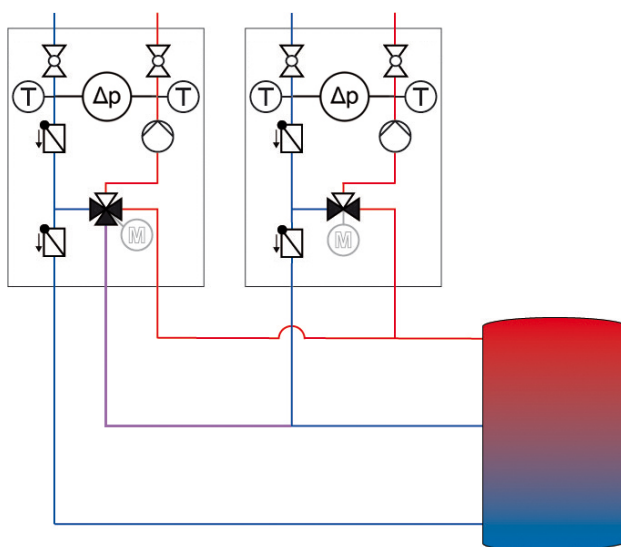

Assembly with radiator circuit (on the right)
and radiant floor heating (on the left)

Application range:


- Heating systems with buffer tank and solar heating support
- Control of radiant floor heating and panel heating systems

3.4 3-temperature mixing valve [specialist]

The 3-temperature mixing valve driven by an electric motor adjusts the flow temperature of the consumer circuit to the desired value in combination with a flow sensor and the controller.

The 3-temperature mixing valve is equipped with a second flow connection (C-3) on the back side. This connection allows to take water with a low flow temperature from the intermediate part of the tank (for example a buffer tank).

A non-return valve (D-1) prevents unwanted circulation.

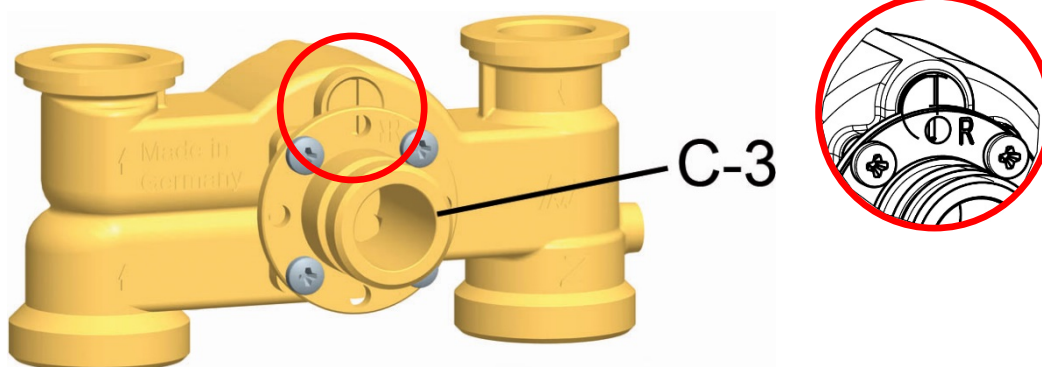

Rear view of mixing valve with flow on the right



Front view of mixing valve with flow on the right

Position 0-5:

The flow temperature is attained by mixing return water and water from the intermediate part of the tank.

Position 5:

100% supply from the intermediate part of the tank

Position 5-10:

The flow temperature is attained by mixing water from the intermediate part and the upper part of the tank.

3.5 Pump [specialist]

Isolation of the pump

The pump can be completely isolated. It can be replaced and maintained without draining the HeatBloC.

1. Close the ball valves in the flow and the return (A-2, F-2).
2. Remove the actuator from the mixing valve.
3. Turn the rotary knob of the mixing valve such that the black nose is directed to "VL zu" (flow closed).

3.5.1 Pump settings

The pump has been correctly adjusted at the factory. In the case of a breakdown of the control (no PWM signal), the pump runs at maximum rotation speed. To assure a proper functioning of the heating circuit, the pump must be set as follows:

- PWM profile (heating)

3.5.2 Pump settings Grundfos UPM3 Hybrid

The following code must appear on the pump display. The code can be verified by briefly pressing the push button. Please observe the separate instructions of the pump!

	Yellow
	Off
	Off
	Yellow
	Red
	

3.5.3 Pump settings Wilo-Yonos PARA RSTG


The rotary knob of the pump must be set to the following symbol.
The LED ring is illuminated in orange. Please observe the separate instructions of the pump!



3.6 Check valve

The HeatBloC is equipped with a check valve (D) in the return pipe and with a non-return valve (D-1) in the mixing valve. The valves can be opened.


Operation

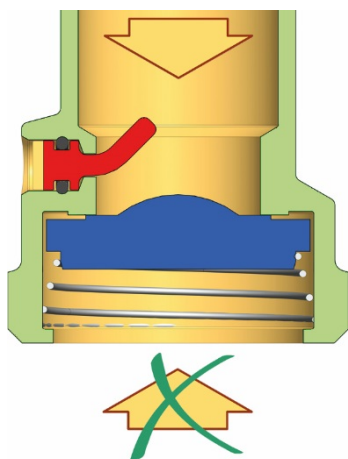


During operation, the marking must be directed to "Z".

→ The check valve is closed.

→ Flow only in the direction of the arrow.

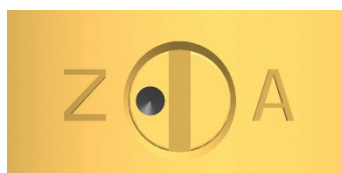


Filling, draining, venting

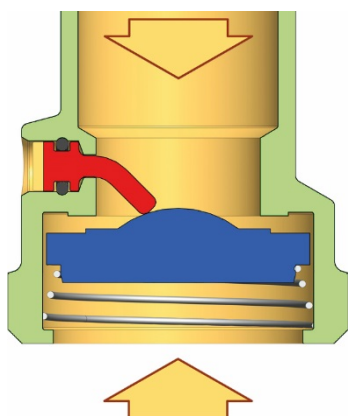

For filling, draining and venting the installation, the marking must be directed to "A".

→ The check valve is open.


→ Flow in both directions.

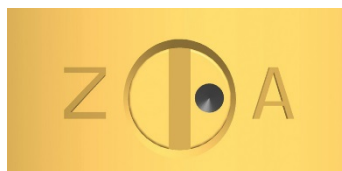

3.7 Actuator


For mixing valves with flow on the left, the scale must be turned by 180°.

Fig. 1

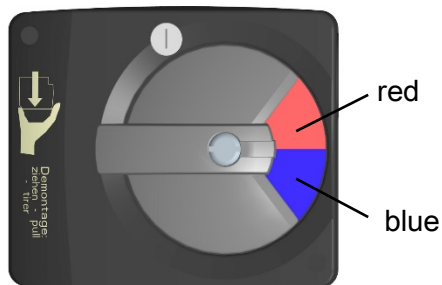


for mixing valve with flow on the left

Fig. 2

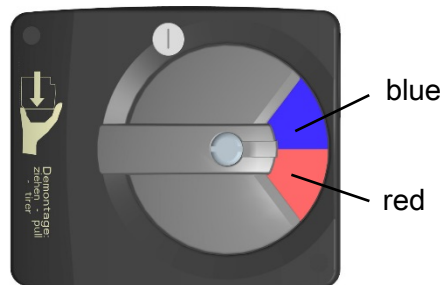

for mixing valve with flow on the right

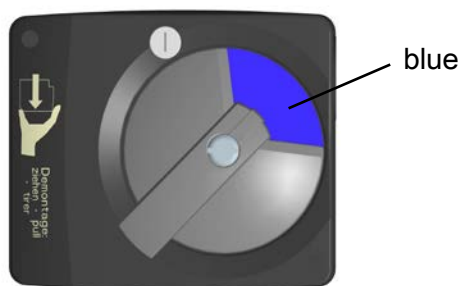

Assembly of the actuator for mixing valves with flow on the right:

1. Turn the rotary knob of the mixing valve into position 0.
2. Set the actuator to manual mode by turning the selector switch.
3. Turn the rotary knob of the actuator to the left to the position shown on the adjacent figure.
4. Put the actuator on the adjusting knob of the mixing valve and the two stop bolts.
5. Set the actuator to automatic mode.



Fig. 4



Fig. 5




4 Change of the flow line [specialist]

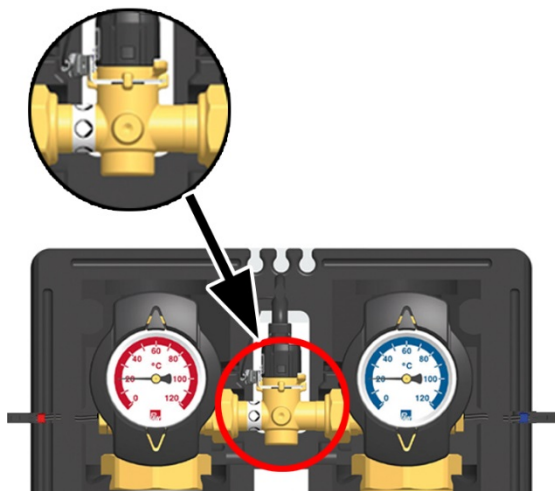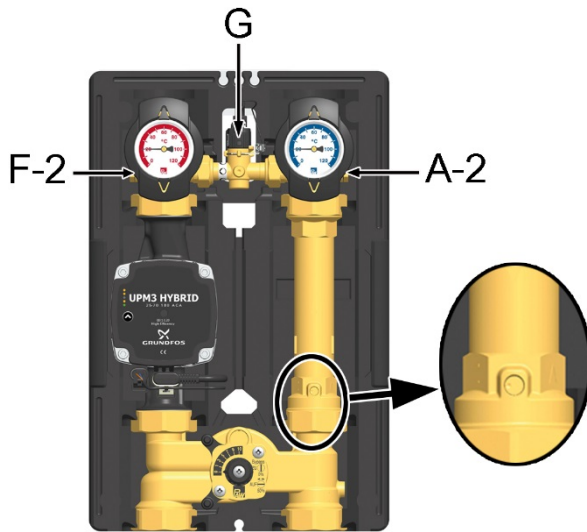


1. Dismount the temperature sensors of the ball valves (A-2 and F-2).
2. Unscrew both nuts of the sensor (G).
3. Unscrew the nuts above and beneath the pump or the return pipe.
4. Mount the return ball valve above the pump and the flow ball valve above the return pipe.
5. Dismount the mixing valve.
Retrofit the mixing valve as described in chapter 4.1 **Conversion of the mixing valve**.
6. Interchange and mount the flow and return line. Please observe the position of the opening mechanism of the check valve in the return pipe (see figure).
7. Mount the sensor (G) between the ball valves.
Attention: The ground lug of the sensor points forward. The banderole indicates on which side of the sensor housing the pump must be fixed (see figure on the left).
8. Flatten the ground lug.
9. Mount the temperature sensors T_R and T_V into the ball valves.
Observe the correct attribution:
Red = Flow
Blue = Return
10. Convert the actuator as described in chapter 3.7 **Actuator**.

4.1 Conversion of the mixing valve

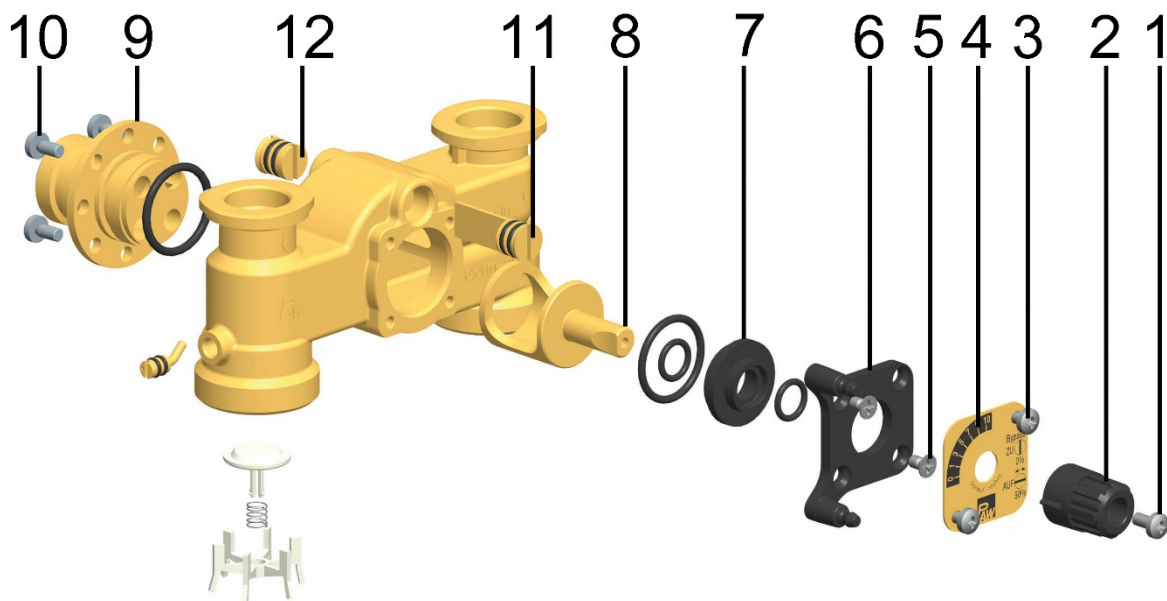


1. Loosen the screw (1).
2. Take off the rotary knob (2) from the cock rod.
3. Loosen the screws (3).
4. Remove the cover plate (4).
5. Loosen the two screws (5).
6. Remove the front plate (6).
7. Extract the sealing bush (7) and the valve cock (8) from the mixing valve housing.
8. Loosen the screws (10) on the back side of the mixing valve and take off the cover (9).
9. Pull the sealing plug (11) to the front using pliers.

Remove the flow-reducing plate (12) by pushing from front to back.

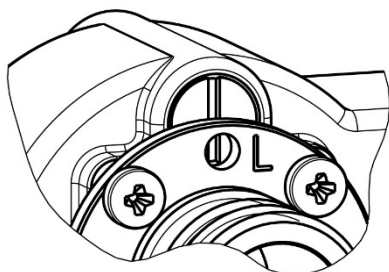

Assembly position
for mixing valve with flow on the left


10. Turn the body of the mixing valve by 180°.
11. Mount the flow-reducing plate (12) on the back side and the sealing plug (11) on the front.
12. Mount the cover (9) on the back side of the mixing valve. The letters on the cover indicate the correct assembly position:
flow on the left: L points upwards
flow on the right: R points upwards
13. Fix the cover (9) using the screws (10).

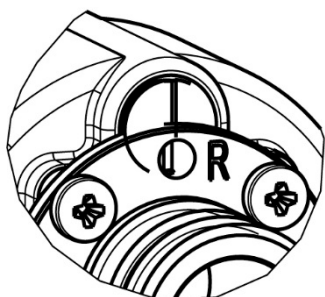


14. Insert the sealing bush (7) and the valve cock (8) into the channel of the mixing valve.

15. Fix the front cover (6) by using the screws (5).

Assembly position for mixing valve
with flow on the right

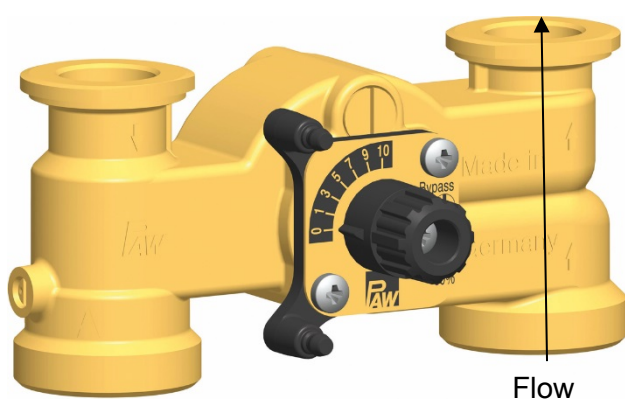

Mixing valve with flow on the right

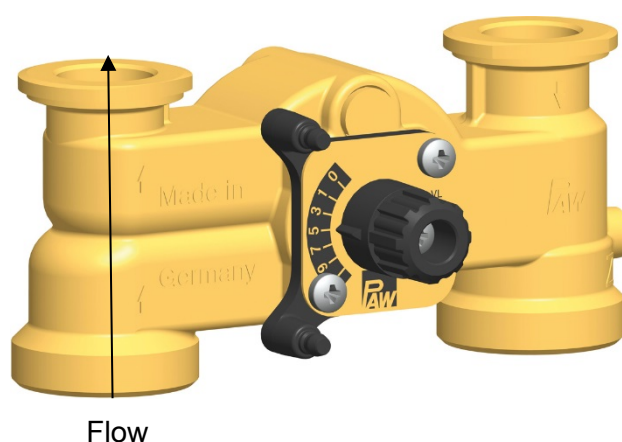

Mixing valve with flow on the left

16. Turn the cover plate (4) such that the marking PAW is at the bottom and that the scale is positioned as shown on the figure above.

17. Fix the cover plate (4) by using the screws (3).

18. Put the rotary knob (2) onto the cock rod.

Fix the rotary knob (2) on the cock (8) by using the screw (1).

5 Assembly and installation [specialist]

The PAW HeatBloC must be either installed on a PAW modular distribution manifold or a PAW wall bracket. Please observe the separate instructions!


NOTICE

Damage to property!

The location of installation must be dry, load-carrying, frost-proof and protected against ultraviolet radiation in order to prevent material damage of the installation.


5.1 Installation and commissioning of the HeatBloC

The HeatBloC MC can be mounted on a PAW modular distribution manifold.

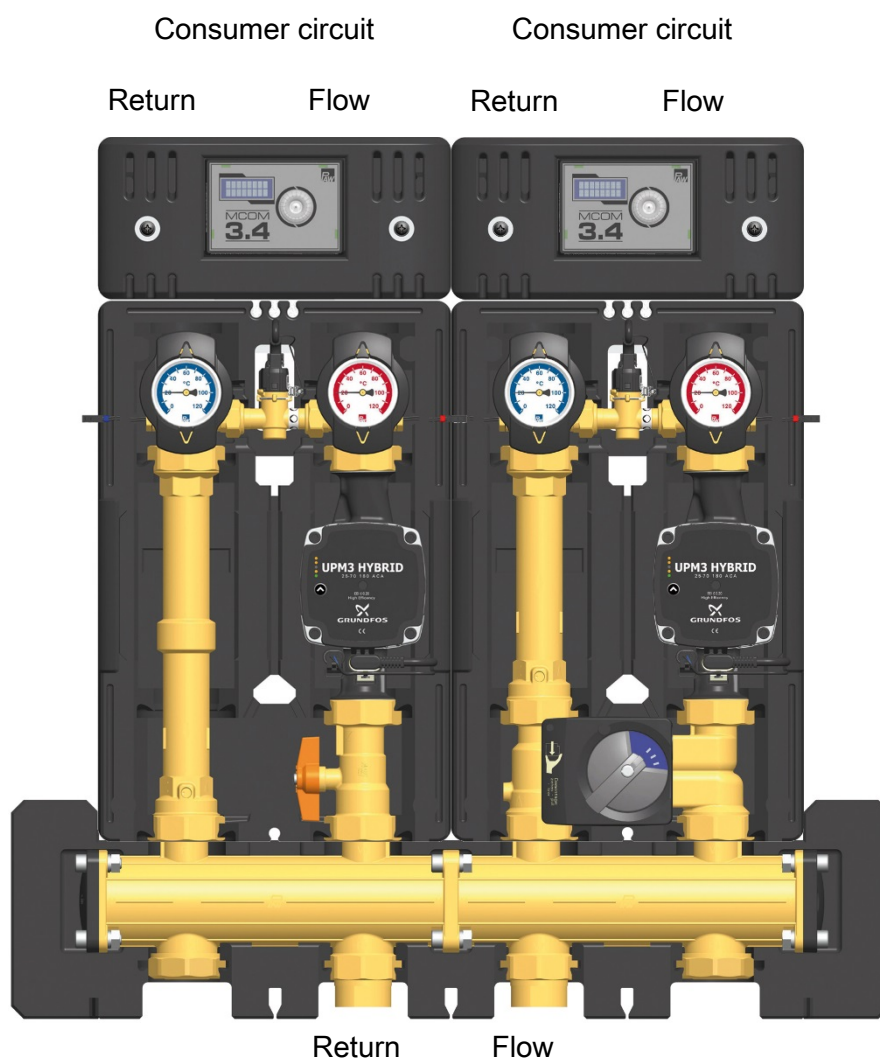


NOTICE

- Verify if the grounding cable holds securely in place at the differential pressure sensor!
The ground lug points in the direction of the banderole.
- Carry out the following mounting instructions in parallel at each heating circuit of the system.

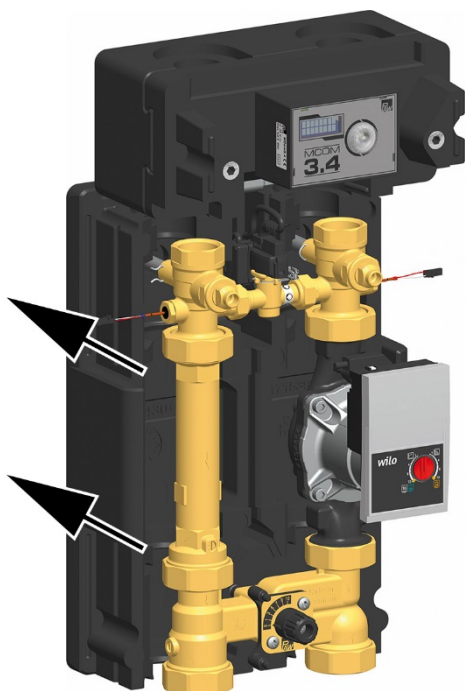


1. Remove the station from the packaging.
2. Take off the thermometer handles.
3. Note regarding HeatBloC with Wilo pump:
Dismount the insulating front shell of the controller and push the insulating back shell backwards.
4. Remove the actuator.
5. Take off the insulating front shells.
6. Push the insulating back shell backwards.

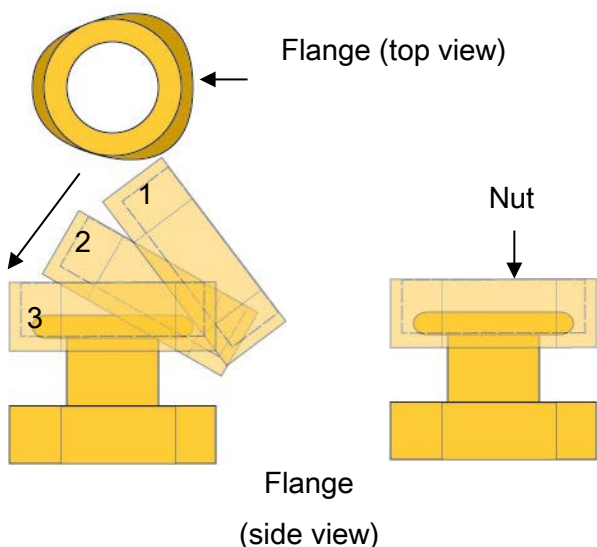

7. Unscrew the nuts on the lower connections of the HeatBloC and take out the sealing rings.
8. Put the two nuts over the flanges of the distribution manifold.

Sealing ring

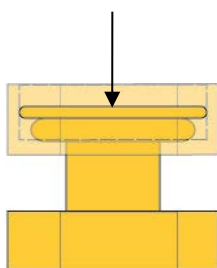

9. Put the sealing rings on the sealing surfaces.
10. Put the HeatBloC onto the two sealing rings.
11. Tighten the nuts. Make sure that the nuts do not get jammed and that the sealing rings do not slip.
12. Connect the HeatBloC to the installation by using the pipes. The installation to the piping must be carried out without any tension. The rear connection can be accessed from below.
13. Repeat these steps for all the HeatBloCs that are mounted.
14. Fill and vent the installation.
15. Carry out a pressure test and check all thread connections.
16. Check the position of the check valve: during operation, the marking must be directed to "Z" (see page 10).
17. Mount the insulating back shell.
In case that the optional pipe set is mounted to the rear connection (C-3), make sure that the plastic cap is correctly positioned.
18. Run first the cable of the actuator through the insulating element of the mixing valve backwards. Mount the insulating element. Mount the actuator (see page 11) and pull the actuator cable backwards at the same time.
19. Connect the power supply of the pump and the actuator to the heating controller.


20. Mount the insulating front elements.

21. Mount the insulating front and back shell of the distribution manifold.


Note:


Cut the insulating back shell in the pipe axis of the connection on the back of the mixing valve (C-3). Thus, the back shell of the distribution manifold is easier to mount.

5.2 Cabling

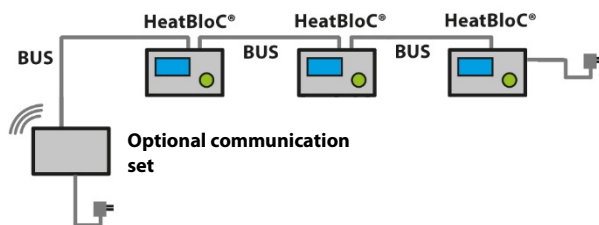

1. Loosen the screws of the controller insulation.
2. Dismount the insulating front shell of the controller.
3. Connect the wall power supply to the socket X6.2 (see below) at the last (right) controller.
4. Connect the bus line from controller 1 to controller 2 in the socket X6.1.
As the two sockets of the bus line (X6.1 and X6.2) are connected in parallel, the position has no importance.
5. Repeat these steps for all the HeatBloCs that are mounted.
6. Remove the bus line from the last controller. Keep the bus line as spare part.

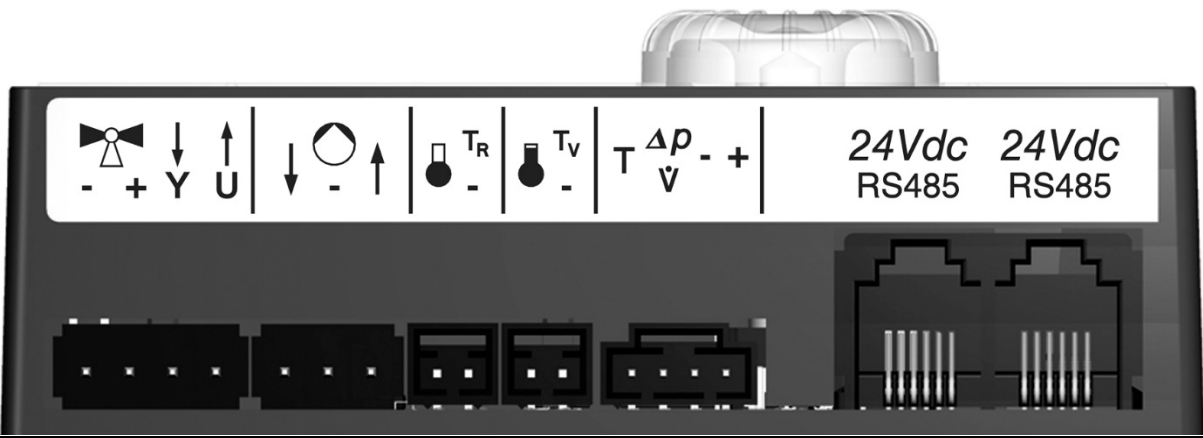						
X1	X2	X3	X4	X5	X6.1	X6.2
X1	not used			X4	Temperature sensor T_V , flow, red marking	
X2	PWM signal of the pump			X5	Differential pressure sensor	
X3	Temperature sensor T_R , return, blue marking			X6.1 X6.2	Supply voltage or bus line (connected in parallel and therefore interchangeable)	

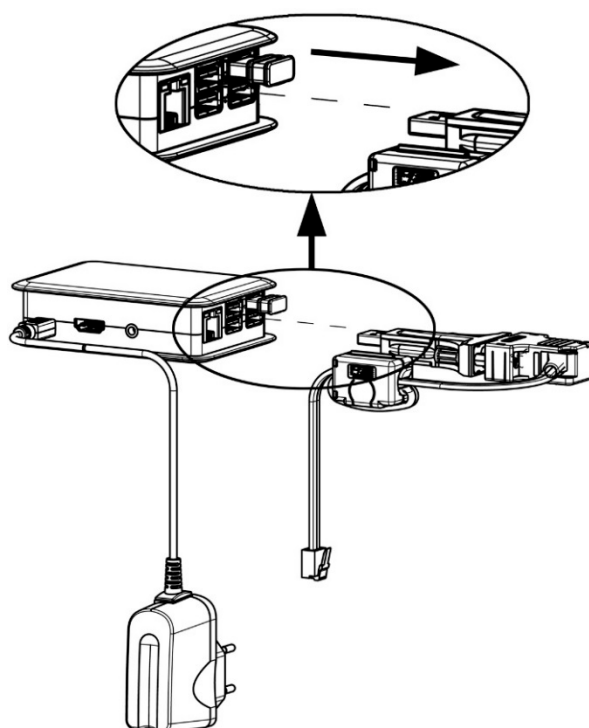

7. If you do not mount the communication set, continue at point 11.
8. If you additionally mount the optional communication set, run the bus line of the communication set to the first (left) controller. For this purpose, disconnect the plug of the bus line from the mini PC of the communication set.
9. Make sure that the plug does not get wet.

10. Mount the optional communication set now. Please observe the separate instructions of the communication set!
11. Carry out the electrical commissioning of the controllers (see controller instructions).



12. Carry out the electrical commissioning of the communication set (see instructions of communication set).
13. Mount the insulating front shell of the controller.
14. Screw the screws in the controller insulation.

15. Please fill in the enclosed insert and fix it on the insulation:

HeatBloC® MC	
Typ:	MC45
Name:	Radiant panel heating, 1st floor
No:	2
 www.paw.eu	

Type:	Type of the heating circuit, f. ex. MC45
Name:	Type of the application and floor, f. ex. radiant panel heating, 1st floor
No.:	Number of the heating circuit according to the controller instructions, f. ex. 2

5.3 Accessories

5.3.1 Connection set (not included in the scope of delivery)


For the connection of the MCom controllers to the power supply **one** connection set (wall power supply, item no. 1398700) is mandatory, regardless of the number of heating circuits.

5.3.2 Communication set (not included in the scope of delivery)

The communication set with insulated housing can be mounted on the distribution manifold or on the wall using the enclosed mounting rail. It is connected with the controllers via a bus line. The internal mini PC is equipped with a power supply unit to assure the power supply and establishes its own local WLAN network. With a smartphone and the corresponding PAW MCom app, you can establish a connection with your installation via this WLAN and set parameters or read out current values.

You will get the app in the App Store for iOS devices and in the Google Play Store for Android devices entering the search term "PAW MCom".


5.3.3 Cutting-ring compression fitting (not included in the scope of delivery)

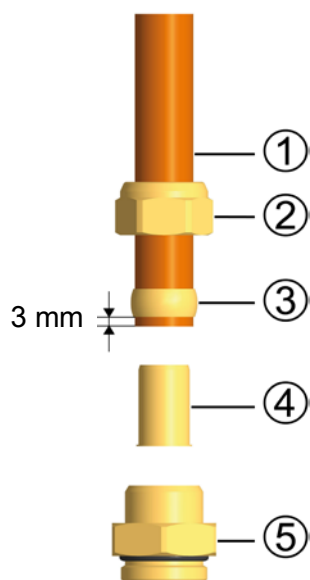

Not included in the scope of
delivery!

1. Push the union nut ② and the cutting ring ③ onto the copper pipe ①. The pipe must protrude at least 3 mm from the cutting ring in order to ensure the force transmission and the sealing.
2. Insert the support sleeve ④ into the copper pipe.
3. Insert the copper pipe with the plugged-on individual parts (②, ③ and ④) as far as possible into the housing of the compression fitting ⑤.
4. First, screw the union nut ② manually.
5. Tighten the union nut ② by rotating one full turn. Secure the housing of the compression fitting ⑤ against distort, in order to avoid damaging the sealing ring.

5.3.4 Wall bracket set for wall assembly (not included in the scope of delivery)

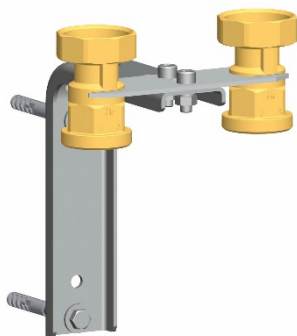

Description	Item no.
Wall bracket set DN 25	3422SET
Wall bracket set DN 32	3722SET

5.3.5 Pipe sets for MC45 (not included in the scope of delivery)


	Description	Item no.
	Piping for a single HeatBloC MC45	36092KS4
	Piping for two HeatBloCs MC45	36092KS2
	Extension pipe set for 3 HeatBloCs MC35	36092KS3

6 Scope of delivery [specialist]


NOTICE

Complaints and requests/orders of spare parts will only be processed with information on the serial number! The serial number is placed on the return pipe of the heating circuit.

6.1 Insulation and controller

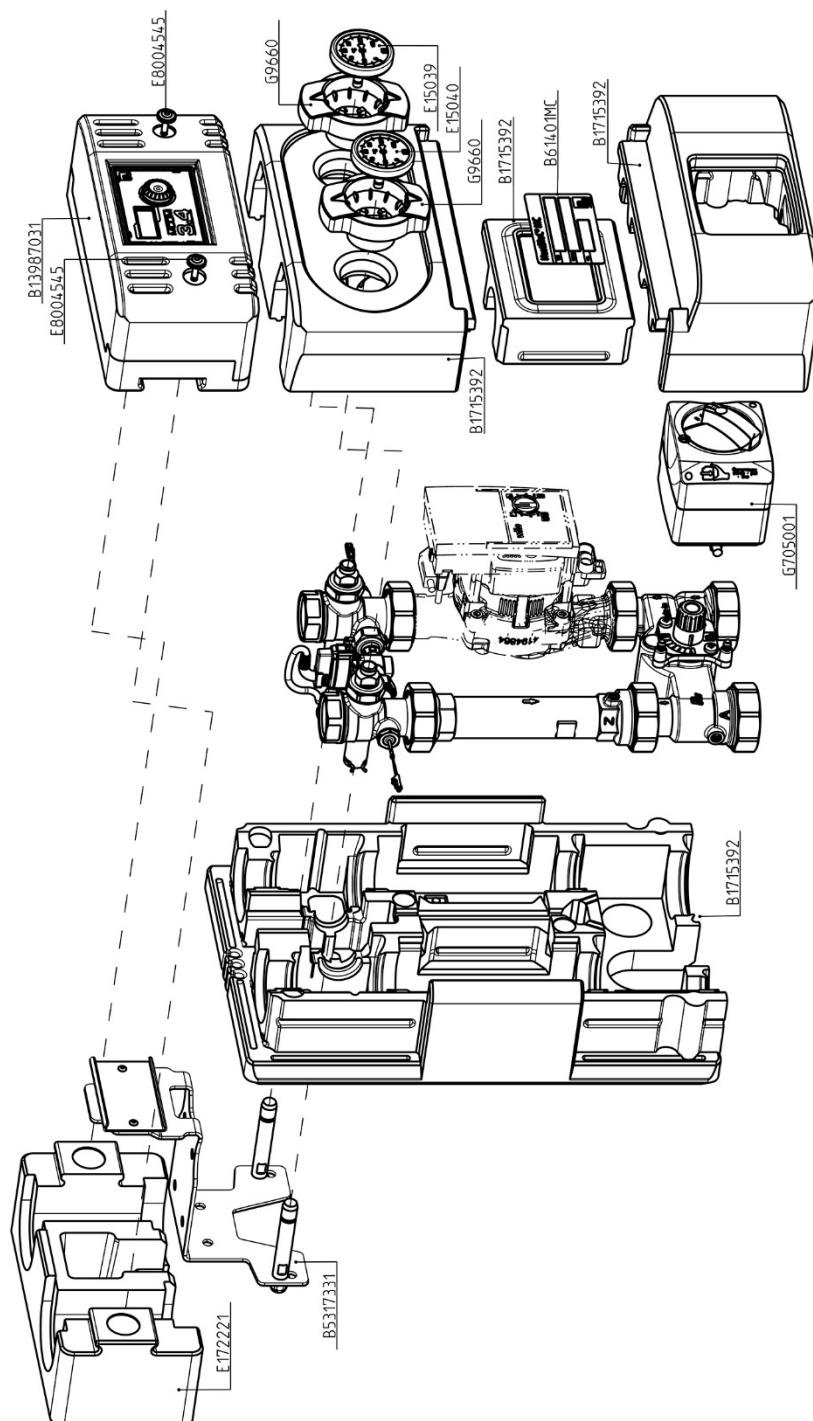

6.2 Hydraulics

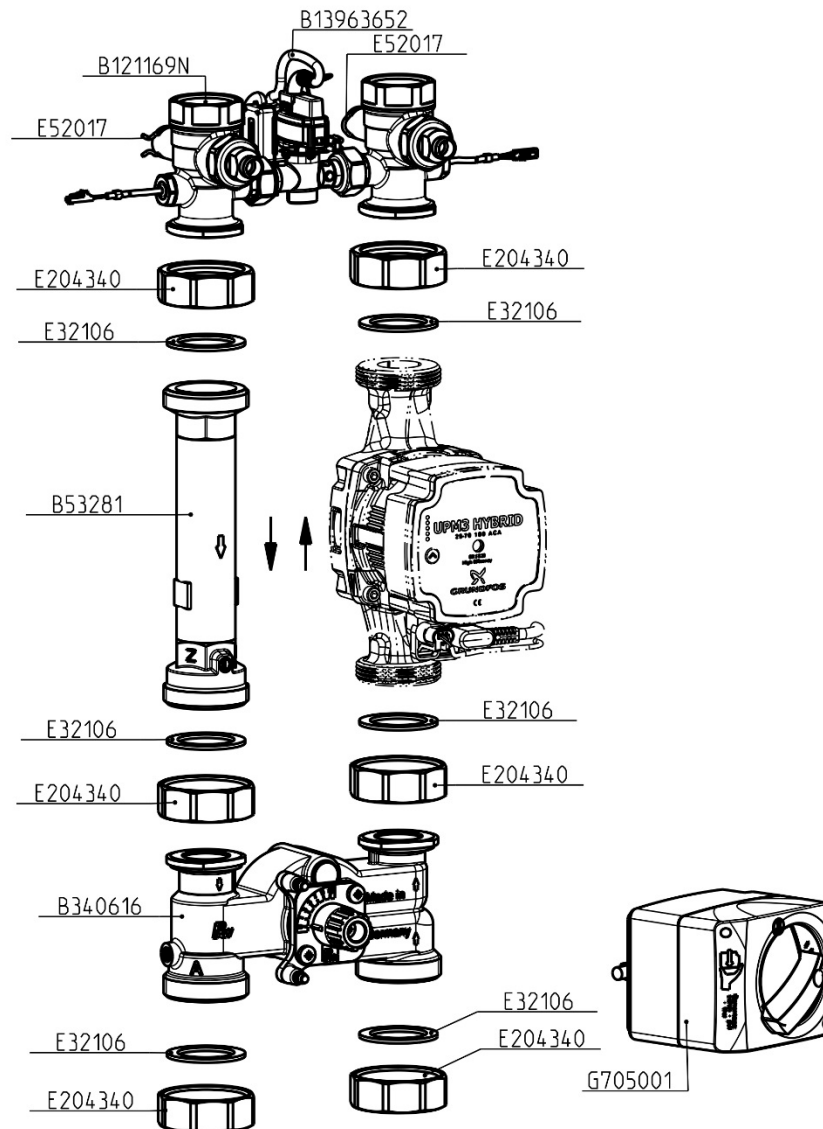


Item	Item number	
Sealing set for mixing valve MC45	37013	
Pump		EEI
Grundfos UPM3 Hybrid 25-70	E1212465F	< 0.20
Wilo-Yonos PARA RSTG 25/1-7.5	E1236247	< 0.21
Mixing valve		
4-way mixing valve (3-temperature mixing valve)	B340616	
Actuator		
PAW actuator SR5 - 5 Nm, 230 V	705001	


7 Technical data

DN 25 (1")	
Dimensions	
Centre distance	125 mm
Width insulation	250 mm
Height insulation	500 mm
Installation length	340 mm
Connections	
Connection generator	1½" external threads, flat-sealing
Connection consumer	1" internal thread
Technical data	
Opening pressure check valve	200 mm wc, can be opened
Materials	
Valves and fittings	Brass
Gaskets	AFM34 / EPDM
Insulation	EPP, EnEV conform
Hydraulics	
Maximum pressure	6 bars
Maximum temperature	110 °C
K _{VS} value [m³/h]	
100% return	5.1
100% low-temperature flow	4.1
100% high-temperature flow	4.7

7.1 Dimensional drawing DN 25

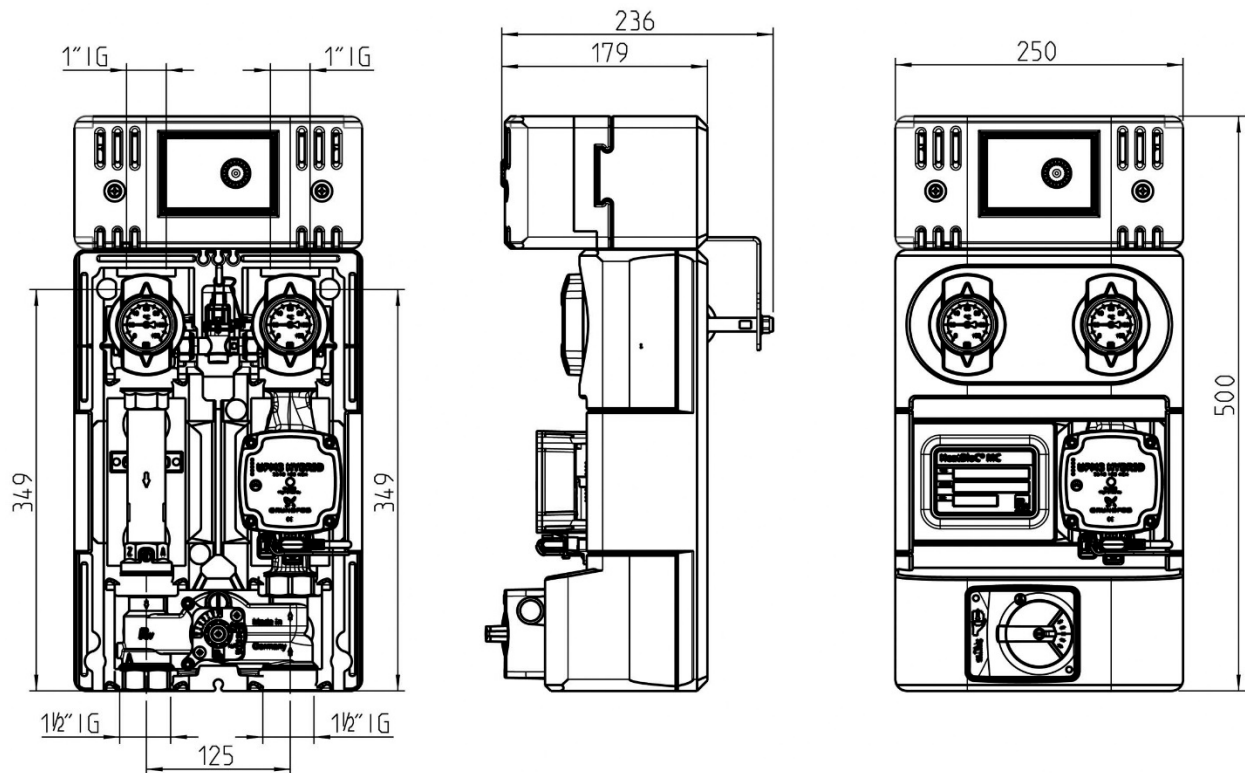

7.2 Pressure drop and pump characteristic curves

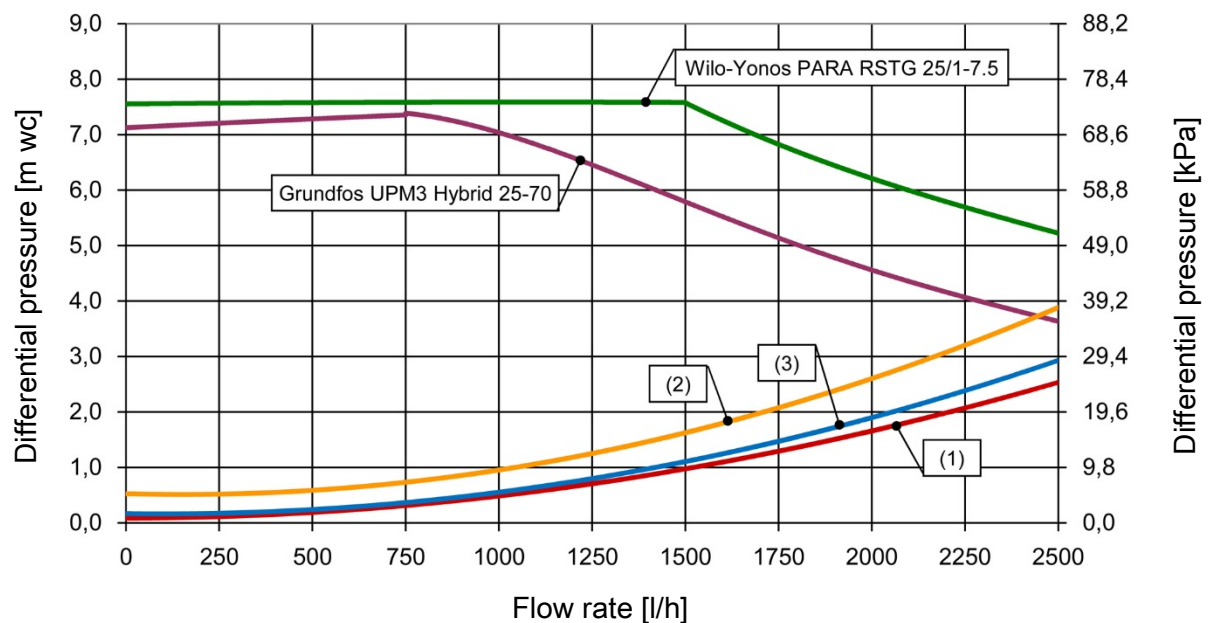

(1)	100% return, Kvs value = 5.1
(2)	100% low-temperature flow, Kvs value = 4.1
(3)	100% high-temperature flow, Kvs value = 4.7

PAW GmbH & Co. KG

Böcklerstraße 11

D-31789 Hameln, Germany

www.paw.eu

Phone: +49 (0) 5151 9856 - 0

Fax: +49 (0) 5151 9856 - 98